


How to Measure for 35mm Wooden Blinds Inside a Bay Window

45 Degree Bay Windows

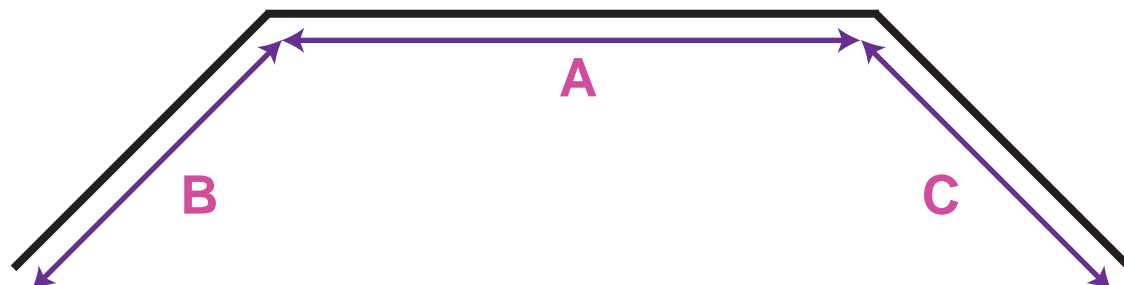


- Take the measurements of A, B & C using a sturdy metal tape measure at the top of the bay window where the blinds are to be fitted. Measure tight into both corners where the blinds will be butting up together. It is preferable to have the wooden blinds butting up, so that when the blinds are in the closed position, the gap between the wood slats is as small as possible. Next check the same measurements at the bottom of the window to make sure the blinds will operate freely and fit when down.

- When you have all these measurements then make the following deductions from the width of each blind:
Deduct **50mm** from the width of **Blind A** - so if the width of the blind was 1000mm, it would then become 950mm.
Deduct **25mm** from the width of **Blind B** - so if the width of the blind was 1000mm, it would then become 975mm.
Deduct **25mm** from the width of **Blind C** - so if the width of the blind was 1000mm, it would then become 975mm.

- When you have made the relevant deductions. Go to the ordering page, enter your measurements and select Outside Recess (exact blind size) from the blind location drop down menu. This is to ensure we don't make any further deductions to the ones you have just made. You don't need to make any deductions to the drops.

90 Degree Bay Windows

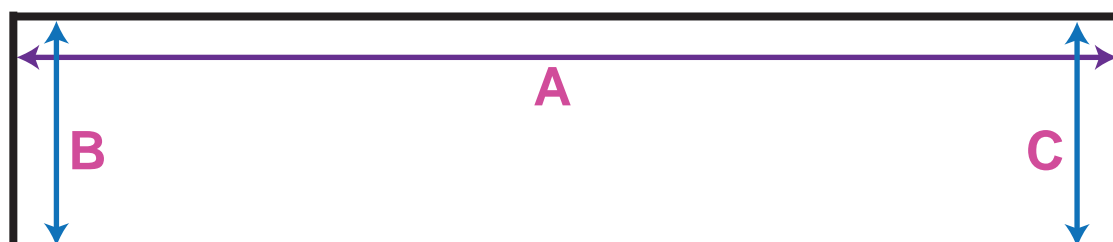

- Follow the instructions for measuring as above and then make the following deductions from the width of each blind:

Deduct **10mm** from the width of **Blind A** - so if the width of the blind was 1000mm, it would then become 990mm.

Deduct **55mm** from the width of **Blind B** - so if the width of the blind was 1000mm, it would then become 945mm.

Deduct **55mm** from the width of **Blind C** - so if the width of the blind was 1000mm, it would then become 945mm.

Note: If there are any obstructions inside the bay window such as tiles, handles, makeup or dado rails then make the appropriate allowances for these obstructions as well, so that the blinds will fit correctly and can be operated freely.