


Fixing the Roller Blind Brackets

The fitting bracket positions shown are for a blind with the control chain on the right hand side. For a roller blind with the control chain on the left hand side, the fixing brackets should be at the opposite ends as illustrated. The brackets can be side, top or face fixed to any level and flat surface. They are required to be level to ensure that the operation of the roller blind is easy and smooth. Also make sure that the rolled up fabric does not touch any surface and therefore interfere with the operation of the blind. To calculate the spacing between the fixing brackets, add 34mm to the width of the roller blind fabric. Fix the brackets so that the outsides of the brackets are exactly this distance apart.

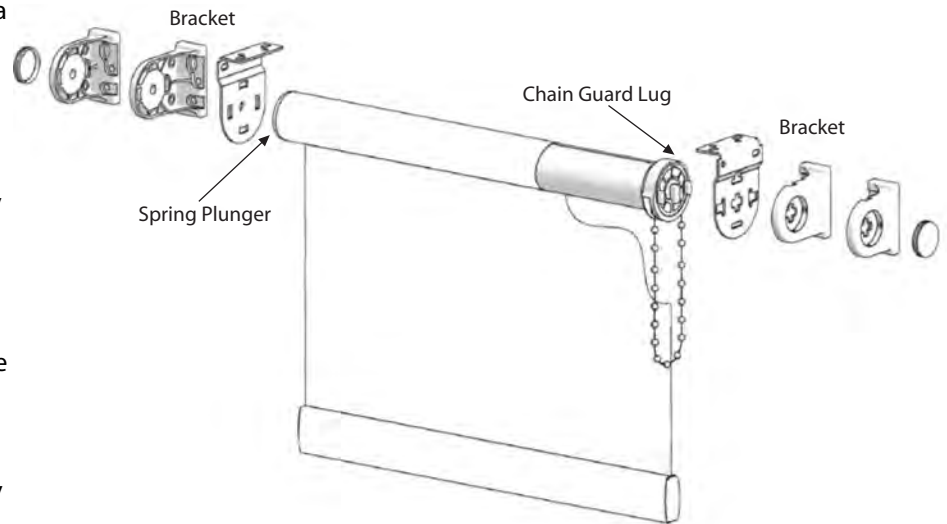

Fitting the Roller Blind

Position the roller blind to the fixing brackets with the fabric hanging at the back of the blind. Fit the spring plunger into its bracket and then push the blind into the bracket, depressing the plunger. With the chain guard lug at the top and the locating hook pointing downwards, place the hook into the vertical part of the '+' shaped hole in the fixing bracket. Allow the hook to drop downwards so that it locks into place inside the bracket.

